

↓

**REVISIONS**

ECO	Description	Checked By	Date	Engineer	Date	Eff. Date
00071	Beta Release	Eric	3/26/2008	Eric	3/26/2008	2008-3-26
00113	Pilot Release					

**Notes:**

1. Material: 80g printing paper, white, A4 size.
2. Printing: Black
3. Pack and tie a label with part number 0-ML00-0018-01-1.

<b>SUREN</b> <sup>®</sup> <small>Suren Systems Ltd.</small>		ITEM NO 0-ML00-0018-01-1	REV 1	
APPROVALS		<b>MANUAL, SP-215FT ENGLISH</b>		
DWN	Sally Chang			18/03/2007
CHK	E. M			18/03/2007
ENGR	Lee JX			18/03/2007
IDENT CODE		DRAWING NO N-ML00-0018-01-1	REV 1	
DO NOT SCALE DRAWING		SIZE A	SCALE 1:1 SHEET 1 OF 3	

↑

# SP-215FT PYROFLEX™ Motion Sensor

## Operation and Specifications

# SUREN

The ST-215FT is an occupancy sensor based on passive infrared (PIR) motion detection, which is used to detect people moving in a room. It can be used both for intrusion detection and lighting control purposes. The sensor provides excellent motion detection capability with its specially designed multi-sensit optical lens and high sensitivity SUREN PYROFLEX™ IR detector. For communication, it contains an Echelon FT3120 Neuron IC, based on LonWorks® network technology.

The SP-215FT is a professional state-of-the-art product engineered with the world's best components and materials. Every aspect of these sensor provides the most reliable motion sensing, yet with freedom from false detection. Microcomputer-based SureSpot™ processing assures the best possible intruder detection with high false detection rejection. In addition, patented PYROFLEX™ IR infrared detection provides much stronger motion signals than conventional detectors--the microcomputer easily tells real moving people from false detection stimuli. Bi-directional temperature compensation supports the best possible detection throughout the wide operating temperature range.

### SENSOR INITIALIZATION

Following power-on, a SP-215FT sensor is fully operational after a two-minute warm-up. During warm-up, its LED is ON. After warm-up, the sensor starts a ten-minute walk-test mode.

**LonWorks® Profile: Occupancy Sensor: 1060**

NV# (M/O)	Name	(In/Out)	SNVT Type (SNVT Index)	Class	Description
1 (M)	NvoOccup	Out	SNVT-occupancy (109)	nv	Occupancy state

### WALK TEST

**Note:** The SP-215FT should be tested once per year.

**In Normal Operating Mode:** Enable the LED (S1:1/JP1 ON). (See page 2 step 8). If the LED is not enabled, then, without removing power, set S1:1/JP1 to ON. Walk across the monitored area (within the sensor's optical fields-of-view). With sensitivity set at STANDARD, the LED should turn ON (detection) after about three to five normal steps. With the sensitivity set at HIGH, the LED should turn ON (detection) after about two to four normal steps. Each time the LED turns ON, wait for it to turn OFF. Then, wait 12 seconds before continuing the walk-test. When there is no motion in the monitored area, the LED should remain OFF.

**In Special Modes:** Cycle power-off/power-on, then Walk-test immediately after warm-up with one of the 10-minute walk-test modes.

### 10-MINUTE WALK-TEST MODES

Immediately after completion of warm-up, the sensor starts one of two types of ten-minute walk-test mode, according to the position of S1:2/JP2. (See page 2 step 8 for sensitivity setting.)

**Flash Counting Mode:** With the sensor sensitivity set at STANDARD, the sensor LED flashes\*, until detection occurs (upon the third flash for nominal signals; upon the second flash for strong signals). When detection occurs and an "occupied" signal is sent, the LED stays ON for five seconds.

**View Finder Mode:** With sensitivity set at HIGH, the sensor LED flashes\* each time a person enters or leaves one of the sensor's optical fields-of-view (FOV). In this mode, the LED does not indicate occupied state, though detection works normally.

\*The LED flash indicates an "event" - generally when a person enters or leaves one of the sensor fields-of-view.

After the end of the ten-minute walk-test mode, the LED operates as selected by the LED enable switch S1:1/JP1.

### ALARM PROCESSING

Dual-element detector fields-of-view alternate between (+) and (-) polarity. SureSpot™-qualified signal events are counted as "pulses" when polarity alternates. Depending on sensitivity setting, (+,-), (-,+), (+,-,+), or (-,+,-) will cause an alarm.

### SUPERVISION

SP-215FT supervision functions include these tests:

- Ambient temperature in-range;
- Detector electronics okay.

When a failure is detected, then:

- 1) the LED blinks ON/OFF every second;
- 2) Signal will not return to an "un-occupied" state after a detection.

Limitations of Security Products: Security products and alarm systems do not offer guaranteed protection against burglary, fire, or other emergencies. They may fail to warn for diverse reasons, including (but not limited to): power failure, dead batteries, improper installation, coverage "blind spots", coverage areas overlooked during installation, defeat by technically sophisticated intruders, component failure, or inadequate maintenance. Alarm systems should be checked weekly to ensure that all devices are working properly. AN ALARM SYSTEM IS NOT A SUBSTITUTE FOR INSURANCE.

#### SUREN LIMITED WARRANTY


SUREN Systems, Ltd., of Fo Tan, Shatin, Hong Kong, warrants its products to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for twelve months from the date of original purchase. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any part which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than Seller. For warranty service, return transportation prepaid, to SUREN Systems, Ltd., Unit 15, 12/F, Block B, Wah Sang Industrial Building, 14-18 Wong Chuk Yeung Street, Fo Tan, Shatin, Hong Kong. Seller has no obligation to attend the buyer's location to retrieve the goods or make repairs on site.

There are no warranties, expressed or implied, of merchantability, or fitness for a particular purpose or otherwise, which extend beyond the description on the face hereof. In no case shall seller be liable to anyone

### SPECIFICATIONS

**Range:** 15 meters in sensor-facing direction  
20 meters at 45° angle from sensor-facing direction


**Sensor Optical View Pattern** (side view, in meters)

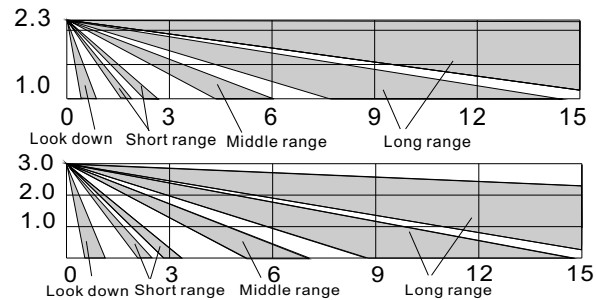

### Optical Fields-of-View:

Long-range    Mid-range    Short-range    Look-down  
44            12            6            2

**Sensor Optical View Pattern** (top view, in meters)

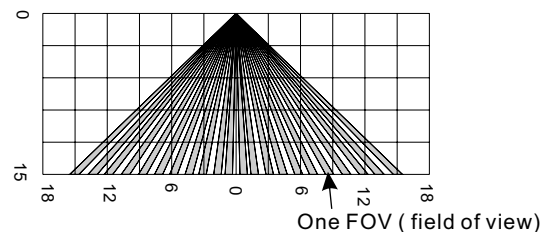

### COMMISSIONING THE SENSOR

If the sensor has not yet been commissioned into a network, after power-on, the red "SERVICE" LED will blink ON/OFF when power is applied. After preparing the network to accept the sensor, press the "SERVICE" switch. After a brief time, the "SERVICE" LED should turn OFF. If at any time, the "SERVICE" LED is always ON, then there is a problem.

The green "TRANSMIT" LED flashes every time the sensor sends a message onto the network. If it does not flash from time to time, then there is a problem.

Network Interface LED operation summary:

LED	ON	ON/OFF	OFF
SERVICE	Problem	Ready to commission	OK
TRANSMIT (after comm.)	Problem	OK	Problem

**IR Sensor:**  
PYROFLEX™, Dual elements

**Power Supply:**  
8-16 Vdc; about 40mA at 12 Vdc

**Housing Material:**  
High-impact ABS

**Dimensions:**  
94 x 50 x 42 mm (H x W x D)

**Approvals/qualification:**

(Pending)

**Accessories:**

**Mounting bracket:**

MB-101

MB-102 -With wall tamper

**Events Detection:**  
SureSpot™ processing engine

**RF Immunity:**  
20 V/m, 10-1000 MHz;  
10 V/m, 1-2 GHz

**White Light Immunity:**  
6500 lux

**Sensitivity:**  
Selectable: 2-event or 3-event

**Operating Temperature Range:**  
-30°C to +55°C

**Temperature compensation:**  
Bi-directional

**Note: Specifications are subject to change without notice.**

for any consequential or incidental damages for breach of this or any other warranty, express or implied, or upon any other basis of liability whatsoever, even if the loss or damage is caused by its own negligence or fault.

Seller does not represent that the products it sells may not be compromised or circumvented; that the products will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the products will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm system may only reduce the risk of a burglary, robbery, or fire without warning, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result.

Consequently, seller shall have no liability for any personal injury; property damage or other loss based on a claim the product failed to give any warning. However, if seller is held liable, whether directly or indirectly, for any loss or damage arising under this limited warranty or otherwise, regardless of cause or origin, seller's maximum liability shall not in any case exceed the purchase price of the product, which shall be the complete and exclusive remedy against seller.

This warranty replaces any previous warranties and is the only warranty made by Seller on this product. No increase or alteration, written or verbal, of the obligations of this Limited Warranty is authorized.

U.S. Patent NO: 7,042,134 7,141,910

U.K. Patent NO: GB 2 427 270 Patents pending worldwide.

# SP-215FT Installation Instructions

## 1: Mounting Location

### A. Wall mounting:


1. Sensor base fastened flat on vertical wall ( $\pm 2$  degrees)

### B. Bracket mounting:

1. Bracket fastened to semi-vertical surface ( $\pm 15$  degrees)
2. Sensor on bracket in vertical position ( $\pm 2$  degrees)


### C. All mounting:

1. Height = 2.3 m or 3m above floor of monitored area
2. Clear line-of-sight from sensor to monitored area  
Note: glass will block sensor's view.
3. Wall temperature similar to walls/floor of monitored area
4. Sensor aimed away from windows and reflected sunlight
5. Sensor aimed away from heaters or heater/cooler outlets
6. Sensor aimed so that likely intruder paths cross three views

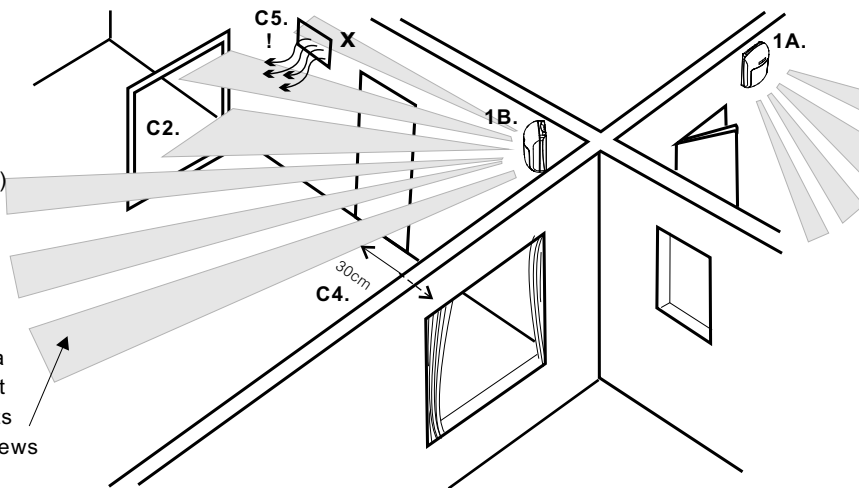


## 2: Sensor Disassembly

In slot at sensor bottom, use screwdriver or thumbnail to push inward (1.) on cover latch. (2.) Remove cover. (3.) Push outward on circuit board latch at sensor base right side. Using circuit board terminal block as handle, gently lift circuit board right side and remove.

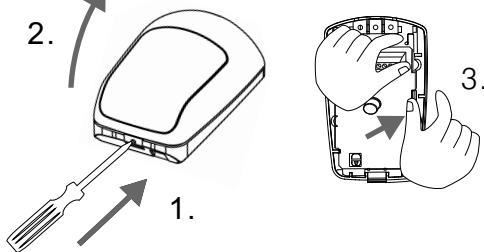


## 3: Base Hole Preparation

Identify necessary holes on diagram;  
 1. For wall mounting, knock out hole covers.  
 2. For corner or 45 degree wall mounting, use drill to open at least two holes at base side depressions.  
 3. For bracket mounting, use drill to open a 3 mm hole in the center of the square recess at the rear of the base. See 6 for more.  
 If cable ties will be added for wire strain relief, select holes needed, then clear out thin plastic material covering those holes.

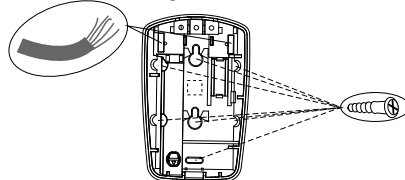


## 4: Cable Preparation

Remove 8 cm of cable jacket. Pass the cable wires through the selected hole. Lay cable in wire channel. Secure cable with cable tie.

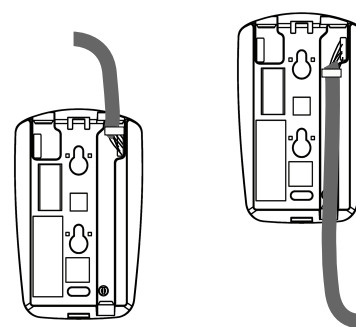


## 5: Wall Mounting

Use screws to mount on wall or in corner.

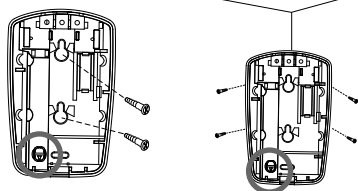

Set circuit board alignment post in position "0" or "1" to select mounting height.

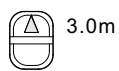


2.3m  
Alignment Post position "0"  
Use with:  
Wide-angle lens.  
Curtain lens

3.0m  
Alignment Post position "1"  
Use with:  
Wide-angle lens  
Curtain lens


## 6: Bracket Mounting

Use screws to mount bracket in desired location. Use screw to mount sensor base onto bracket. Refer to 5 for setting circuit board alignment post.

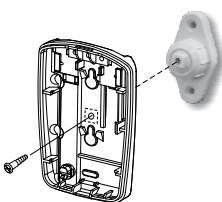

## 7: Circuit Board Installation

To replace circuit board, (1.) place circuit board left edge into two left-hand mounting slots in sensor base. (2.) On right-hand side, gently press circuit board into place until latch snaps over circuit board. Cut cable wires to appropriate length and connect wires to sensor terminal block.

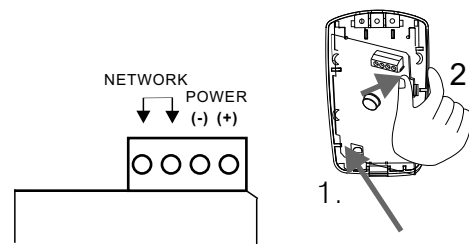


## 8: Operation Programming

Either S1:1/S1:2 or JP1/JP2 are provided for programming. Set according to need. If there is a way for persons to pass only a very short distance in the sensor's view, or if quicker detection is required, then use high sensitivity. Otherwise, standard sensitivity is fine for ordinary applications. Factory-set S1 positions are shown below in gray.  
 Pulse counts: High=2; Standard=3.

SP-215FT			
FUNCTION		ON	OFF
SENSITIVITY	S1:2 JP2	STANDARD	HIGH
LED ENABLE	S1:1 JP1	ENABLE	DISABLE

## 9: Motion Distance Sensitivity

With standard sensitivity, detection occurs in 3 to 5 steps. With high sensitivity, detection occurs in 2 to 4 steps.

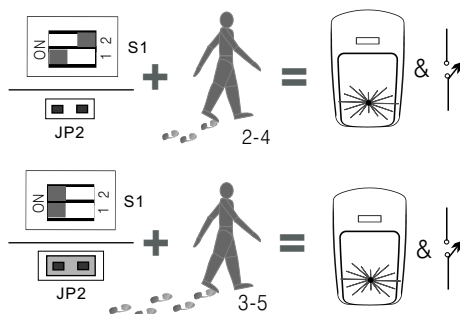

## 10: LED Indicator Operation

The chart below shows possible LED indications.

SP-215FT	
Sensor State	LED Display
Warm-up	ON
Detection	ON 5 Seconds (IF LED ENABLED)
Failure	Flashing
Normal	OFF