

SP-012C Motion Sensor

Operation and Specifications

SUREN

The SP-012C is a professional state-of-the-art motion sensor engineered with the world's best components and materials, starting with a SUREN SureTrac™ optics and a top-quality infrared detector. Next, a modern digital amplifier (patent-pending) directly converts the infrared detector signal into digital form, for best reliability and stability. Finally, the signal is evaluated by SUREN's HighBar™ processor, for "best-in-class" false alarm rejection with excellent intruder detection.

SENSOR INITIALIZATION

Following power-on, a SP-012C sensor is fully operational after a one-minute warm-up.

WALK TEST

Note: The SP-012C should be tested once per year.

In Normal Operating Mode: Enable the LED (JP1 ON). If the LED is not enabled, then, without removing power, set JP1 to ON. Walk across the monitored area (across the sensor's optical fields-of-view). The LED should turn ON (for Alarm) after simply crossing the fields-of-view. Each time the LED turns ON, wait for it to turn OFF. Then, wait 12 seconds before continuing the walk-test. When there is no motion in the monitored area, the LED should remain OFF.

ALARM PROCESSING

Dual-element detector fields-of-view alternate between (+) and (-) signal polarity. HighBar™-qualified signal events are counted as "pulses" exclusively when polarity alternates. In other words, only a pulse sequence of (+,-) or (-,+) will cause an alarm.


CURTAIN-SHAPED SENSING PATTERN

The SP-012C is designed to detect humans moving through a relatively thin vertical plane. At most, the plane is about 0.8 M thick. The SP-012C optical view pattern consists of two vertically-arrayed field-of-view sets, one (+) and one (-). With SureTrac™ optics, the higher (longer-range) fields-of-view are arranged with a smaller angle between (+) and (-) views. Thus, the optical view pattern remains "thin" even at longer ranges.

SPECIFICATIONS

Range: 12 meters in sensor-facing direction


Sensor Optical View Pattern (side view, in meters)

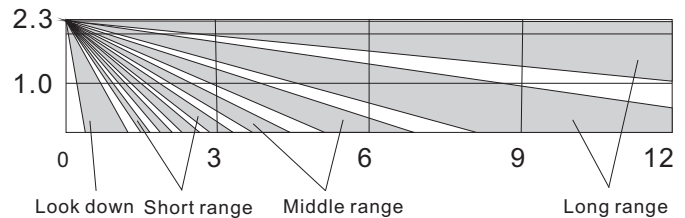

Optical Fields-of-View:

Long-range	Mid-range	Short-range	Look-down
4	4	8	2

Sensor Optical View Pattern (top view, in meters)

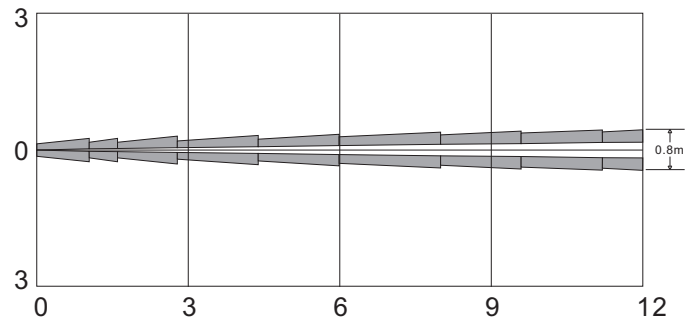

IR Sensor:

Dual elements

Power Supply:

8-16 Vdc; 18 mA at 12 Vdc

Alarm Relay:

Reed, form A(NC), 100mA at 30 Vdc.

Tamper Switch:

Form A (NC). 50 mA at 30 Vdc

Housing Material:

High-impact ABS

Dimensions:

94 x 50 x 42 mm (H x W x D)

Approvals/qualification:

CCC



Complies with:

EN 50131-2-2 Grade 2, Class II

Events Detection:

HighBar™ false alarm rejection processor

RF Immunity:

20 V/m, 10-1000 MHz;

10 V/m, 1-2 GHz

White Light Immunity:

6500 lux

Sensitivity:

Selectable: 2-event or 3-event

Operating Temperature

Range:

-10°C to +55°C

Accessories:

Mounting bracket:

MB-100

Note: Specifications are subject to change without notice.

Limitations of Security Products: Security products and alarm systems do not offer guaranteed protection against burglary, fire, or other emergencies. They may fail to warn for diverse reasons, including (but not limited to): power failure, dead batteries, improper installation, coverage "blind spots", coverage areas overlooked during installation, defeat by technically sophisticated intruders, component failure, or inadequate maintenance. Alarm systems should be checked weekly to ensure that all devices are working properly. AN ALARM SYSTEM IS NOT A SUBSTITUTE FOR INSURANCE.

SUREN LIMITED WARRANTY

SUREN Systems, Ltd., of Fo Tan, Shatin, Hong Kong, warrants its products to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for twelve months from the date of original purchase. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any part which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than Seller. For warranty service, return transportation prepaid, to SUREN Systems, Ltd., Unit 15, 12/F, Block B, Wah Sang Industrial Building, 14-18 Wong Chuk Yeung Street, Fo Tan, Shatin, Hong Kong. Seller has no obligation to attend the buyer's location to retrieve the goods or make repairs on site.

There are no warranties, expressed or implied, of merchantability, or fitness for a particular purpose or otherwise, which extend beyond the description on the face hereof. In no case shall seller be liable to anyone

for any consequential or incidental damages for breach of this or any other warranty, express or implied, or upon any other basis of liability whatsoever, even if the loss or damage is caused by its own negligence or fault.

Seller does not represent that the products it sells may not be compromised or circumvented; that the products will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the products will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm system may only reduce the risk of a burglary, robbery, or fire without warning, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result.

Consequently, seller shall have no liability for any personal injury, property damage or other loss based on a claim the product failed to give any warning. However, if seller is held liable, whether directly or indirectly, for any loss or damage arising under this limited warranty or otherwise, regardless of cause or origin, seller's maximum liability shall not in any case exceed the purchase price of the product, which shall be the complete and exclusive remedy against seller.

This warranty replaces any previous warranties and is the only warranty made by Seller on this product. No increase or alteration, written or verbal, of the obligations of this Limited Warranty is authorized.

Patents issued and pending worldwide

SP-012C Installation Instructions

1: Mounting Location

A. Wall mounting:


1. Sensor base fastened flat on vertical wall (± 2 degrees)

B. Bracket mounting:

1. Bracket fastened to semi-vertical surface (± 15 degrees)
2. Sensor on bracket in vertical position (± 2 degrees)


C. All mounting:

1. Height = 2.3 m above floor of monitored area
2. Clear line-of-sight from sensor to monitored area
Note: glass will block sensor's view.
3. Wall temperature similar to walls/floor of monitored area
4. Sensor aimed away from windows and reflected sunlight
5. Sensor aimed away from heaters or heater/cooler outlets
6. Sensor aimed so that likely intruder paths cross three views

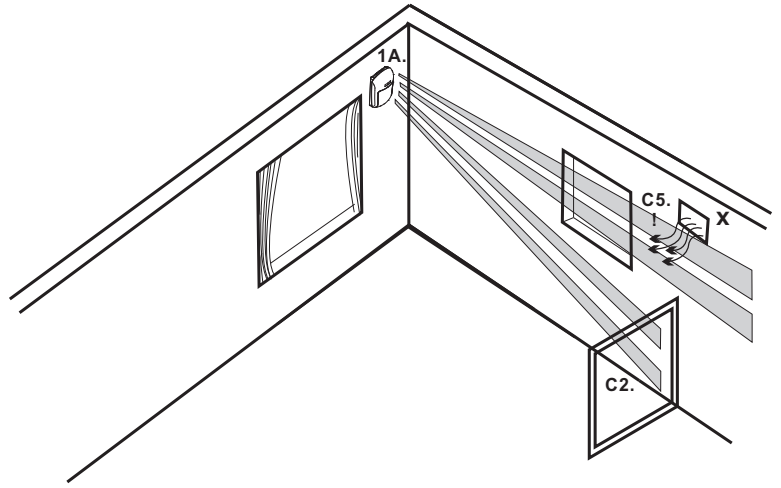

2: Sensor Disassembly


In slot at sensor bottom, use screwdriver or thumbnail to push inward (1.) on cover latch. (2.) Remove cover. (3.) Push outward on circuit board latch at sensor base right side. Using circuit board terminal block as handle, gently lift circuit board right side and remove.

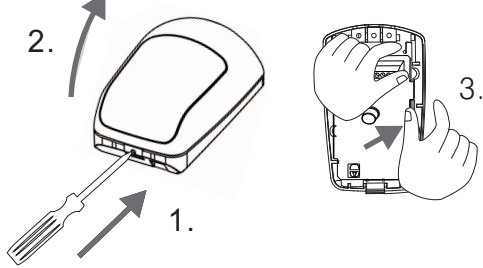

3: Base Hole Preparation


Identify necessary holes on diagram;

1. For wall mounting, knock out hole covers.
 2. For corner or 45 degree wall mounting, use drill to open at least two holes at base side depressions.
 3. For bracket mounting, use drill to open a 3 mm hole in the center of the square recess at the rear of the base. See 6 for more.
- If cable ties will be added for wire strain relief, select holes needed, then clear out thin plastic material covering those holes.

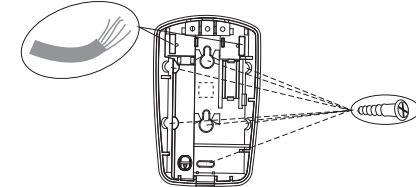


4: Cable Preparation

Remove 8 cm of cable jacket. Pass the cable wires through the selected hole. Lay cable in wire channel. Secure cable with cable tie.

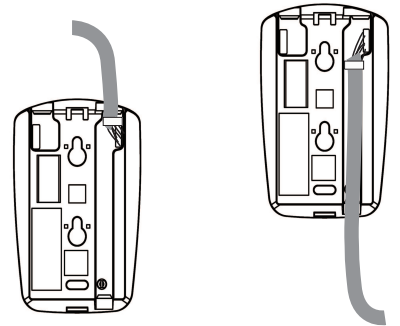


5: Wall Mounting

Use screws to mount on wall or in corner.

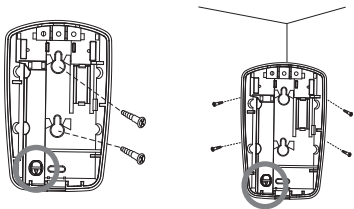


Set circuit board alignment post in position "1".

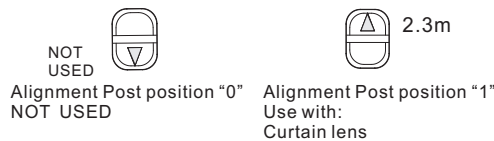


6: Bracket Mounting

Use screws to mount bracket in desired location. Use screw to mount sensor base onto bracket. Refer to 5 for setting circuit board alignment post.

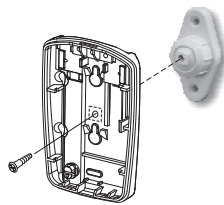

7: Circuit Board Installation

To replace circuit board, (1.) place circuit board left edge into two left-hand mounting slots in sensor base. (2.) On right-hand side, gently press circuit board into place until latch snaps over circuit board. Cut cable wires to appropriate length and connect wires to sensor terminal block.

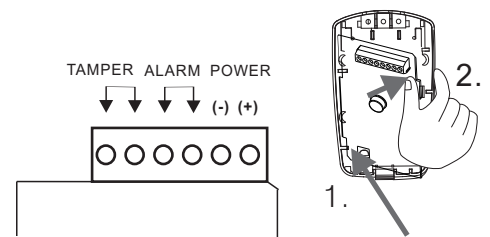


8: Operation Programming

Set JP1 according to need. Factory-set jumper positions are shown below in gray. Pulse counts: High=2; Standard=3.

SP-012C			
FUNCTION	JP	ON	OFF
LED ENABLE	1	ENABLE	DISABLE

9: Motion Distance Sensitivity

Motion detection occurs when a person crosses one of the sensor's fields-of-view and enters the other one. The fields-of-view angles are designed so that this will typically happen after an 0.5m walk across the fields-of-view.

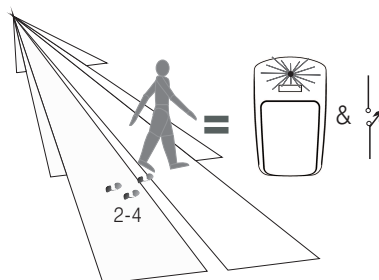

10: LED Indicator Operation

The chart below shows possible LED indications.

SP-012C	
Sensor State	LED Display
Warm-up	OFF
Alarm	ON 3-6 Seconds (IF LED ENABLED)
Normal	OFF